


# Assembly - ALPINE LEDGE-ANGLE SYSTEM

1. Installation to be completed in accordance with manufacturer's written specifications and installation instructions.
2. See spec sheet or contact manufacturer for detailed material, finishes, and configuration options.
3. Contact manufacturer for detailed layout.
4. Do not scale drawings.
5. Subject to change without notice.
6. For patent information, visit our [Patent Page](#).

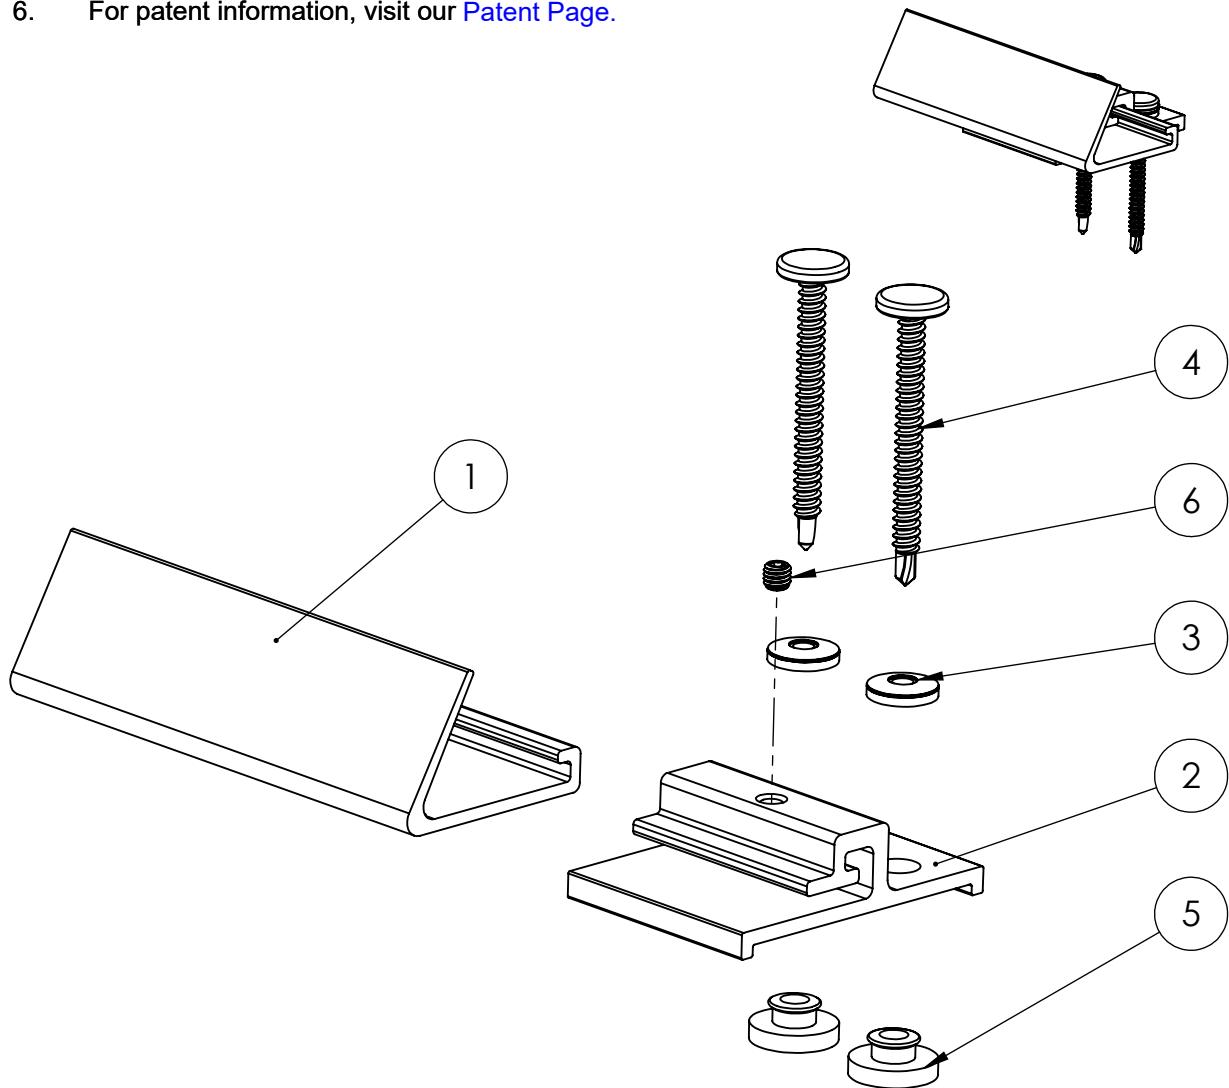

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	ALPINE LEDGE-ANGLE	6' LEDGE ANGLE-AL	AS NEEDED
2	ALP LEDGE-ANGLE CLIP	1.75" LEDGE ANGLE CLIP-AL	1
3	W-NEO SS-.200	SS NEO WASHER .200" ID (INCLUDED IN POLY KIT) WASHER .20)	2
4	APPROPRIATE FASTENER	MOUNTING SCREW (CUSTOMER SUPPLIED)	2
5	BUSHING B-200	BUSHING EPDM .625"X.289"X.203" (INCLUDED IN POLY KIT B-200)	2
6	SET-O SS-10-32X.1875	SS OVAL PT SET SCREW 10-32X.1875" WITH NYLON PATCH	1



289 Harrel Street  
Morrisville, VT 05661  
Phone: 1.888.766.4273  
Fax: 1.888.766.9994  
Email: [Info@alpinesnowguards.com](mailto:Info@alpinesnowguards.com)