



# Cut Sheet - HS-700

1. Installation to be completed in accordance with manufacturer's written specifications and installation instructions.
2. See spec sheet or contact manufacturer for detailed material, finishes, and configuration options.
3. Contact manufacturer for detailed layout.
4. Do not scale drawings.
5. Subject to change without notice.
6. For patent information, visit our [Patent Page](#).

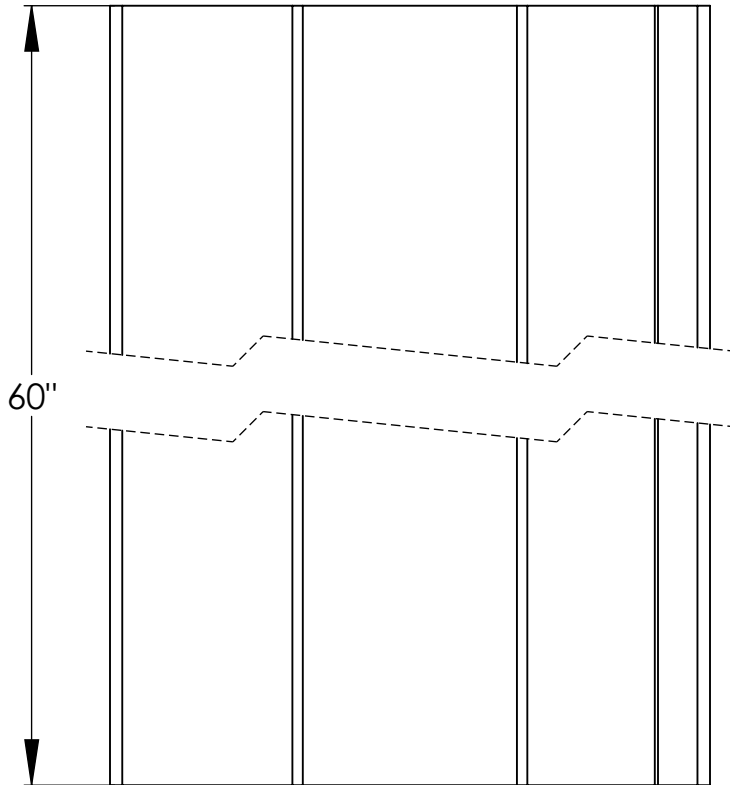

COMPONENTS:  
HS-701 BASE  
HS-702 COVER

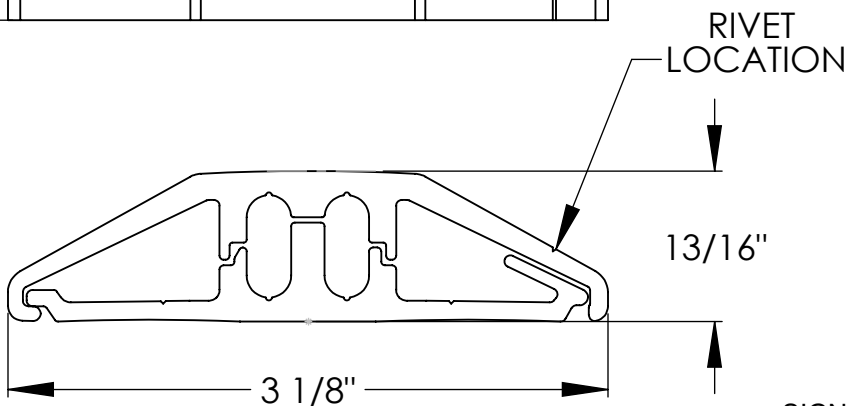

## Confirm Heat Trace Part No.

- ☐ RAYCHEM GM-1X
- ☐ RAYCHEM GM-2X
- ☐ CHROMOLOX CPR-10
- ☐ CHROMOLOX CPR-15

SIGNATURE: \_\_\_\_\_

DATE: \_\_\_\_\_



289 Harrel Street  
Morrisville, VT 05661  
Phone: 1.888.766.4273  
Fax: 1.888.766.9994  
Email: [Info@alpinesnowguards.com](mailto:Info@alpinesnowguards.com)

Scale: 1:3

8/13/2024