


Assembly Sheet - HEATDEFENDER 3 CABLE SYSTEM

1. Installation to be completed in accordance with manufacturer's written specifications and installation instructions.
2. See spec sheet or contact manufacturer for detailed material, finishes, and configuration options.
3. Contact manufacturer for detailed layout.
4. Do not scale drawings.
5. Subject to change without notice.
6. For patent information, visit our [Patent Page](#).

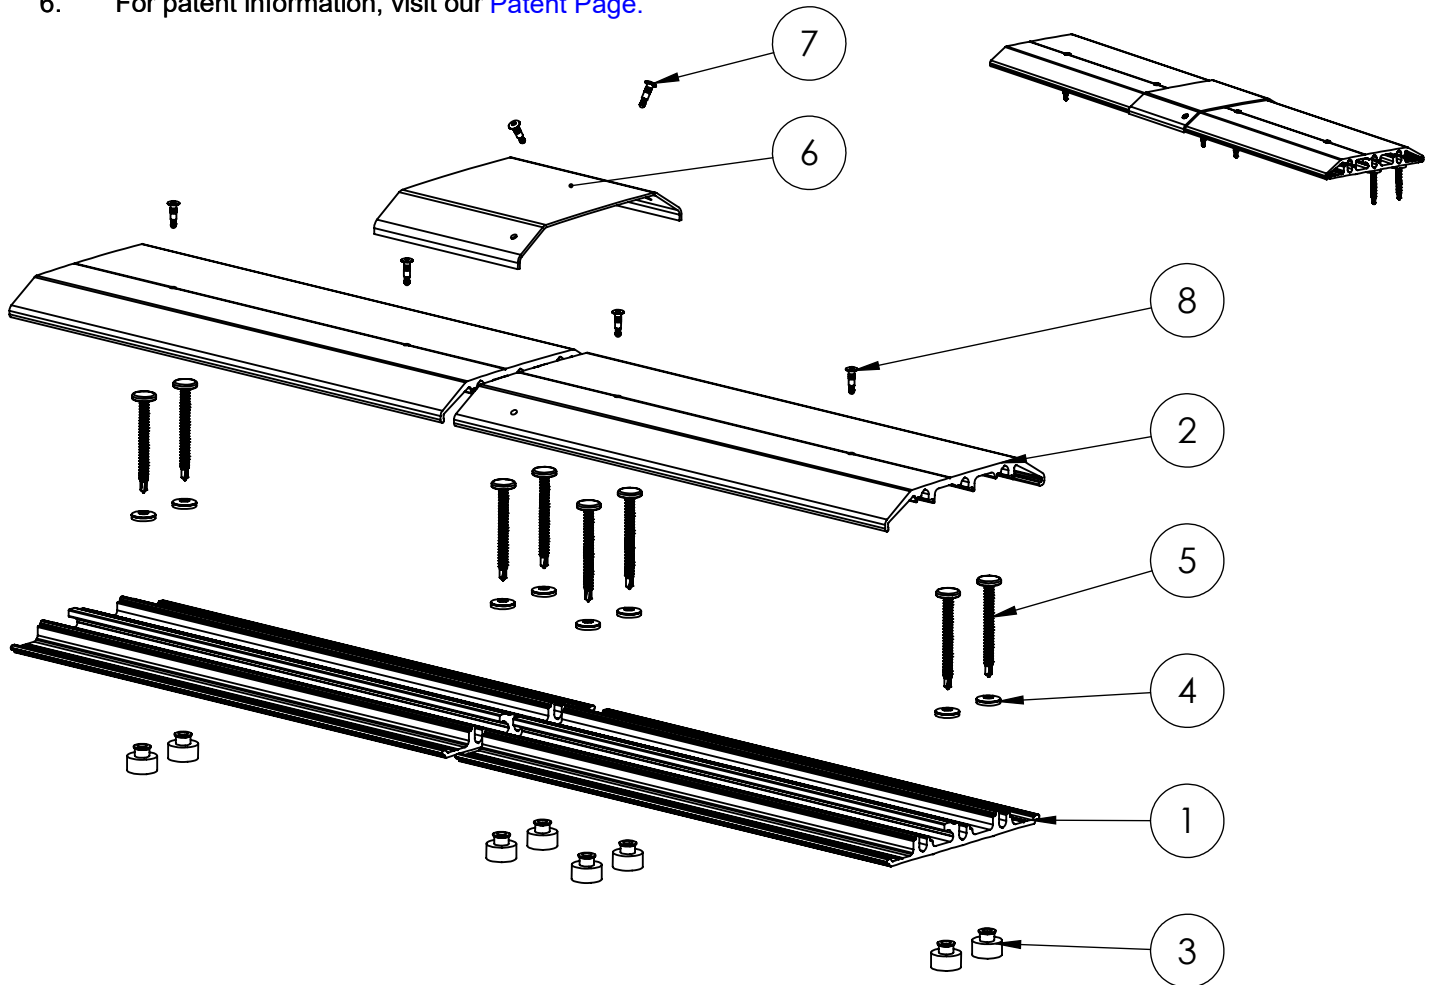

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	HS-801	HD 3-CABLE BASE (6' LENGHT)	AS NEEDED
2	HS-802	HD 3-CABLE COVER (6' LENGHT)	AS NEEDED
3	BUSHING	BUSHING EPDM .203 X .625	8/BASE
4	W-NEO SS-.25	SS NEO WASHER .25 ID	8/BASE
5	#10 WOODSCREW	MOUNTING SCREW (CUSTOMER SUPPLIED)	8/BASE
6	HS-803-C	EXTRUSION COUPLING	AS NEEDED
7	HOUSING RIVET	.125" BLIND RIVET (CUSTOMER SUPPLIED)	2/BASE
7	COUPLING RIVET	.125" BLIND RIVET (CUSTOMER SUPPLIED)	2/COUPLING



289 Harrel Street
 Morrisville, VT 05661
 Phone: 1.888.766.4273
 Fax: 1.888.766.9994
 Email: Info@alpinenowguards.com

Scale: 1:4

7/26/2024