


# Assembly Sheet - PP115R (ALL CONFIGURATIONS)

1. Installation to be completed in accordance with manufacturer's written specifications and installation instructions.
2. See spec sheet or contact manufacturer for detailed material, finishes, and configuration options.
3. Contact manufacturer for detailed layout.
4. Do not scale drawings.
5. Subject to change without notice.
6. For patent information, visit our [Patent Page](#).

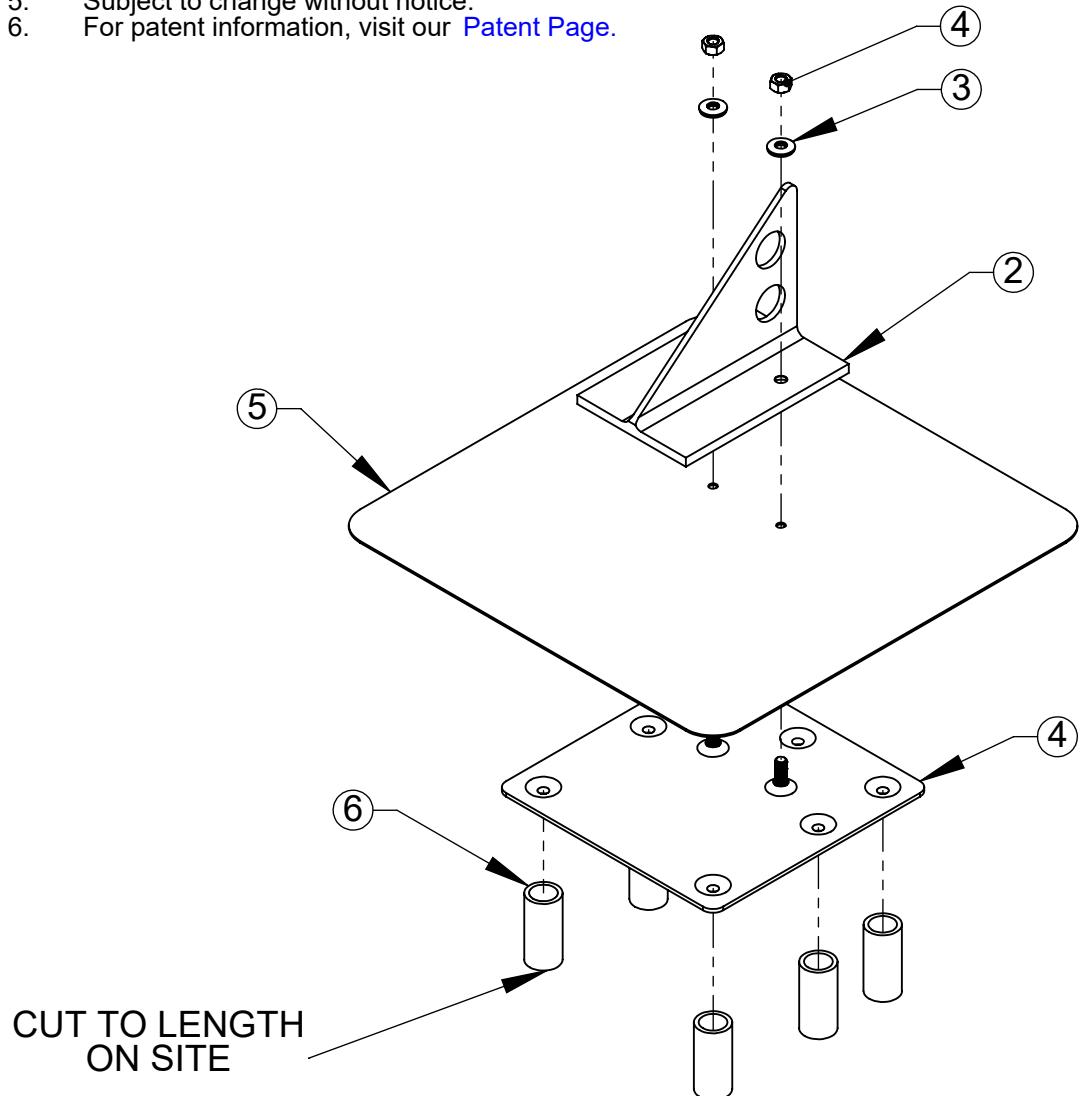

CONTACT ALPINE SNOWGUARDS FOR FERRULE LENGTHS GREATER THAN 6"

ITEM NO.	PART CODE	DESCRIPTION	QTY
1	BASE SS 8X8-100R	SS 8X8-100R BASE PLATE	1
2	KIT-145 BRACKET (2-PIPE SHOWN)	KIT-145 BRACKET (2-PIPE, 3-PIPE, OR HI-HOLE OPTIONS)	1
3	W-NEO SS-.313	SS NEO WASHER .313 ID (INCLUDED IN POLY KIT 145)	2
4	N-HX SS-.3125-18	NUT SS HEX FINISHED .3125-18 (INCLUDED IN POLY KIT 145)	2
5	TARGET PATCH FLASHING	TARGET PATCH FLAASHING (CUSTOMER SUPPLIED)	1
6	FERRULE	FERRULE FOR 115R-1" OD-AL (SOLD SEPERATELY)	6



289 Harrel Street  
 Morrisville, VT 05661  
 Phone: 1.888.766.4273  
 Fax: 1.888.766.9994  
 Email: [Info@alpinesnowguards.com](mailto:Info@alpinesnowguards.com)