


# Assembly Sheet - PP120 (ALL CONFIGURATIONS)

1. Installation to be completed in accordance with manufacturer's written specifications and installation instructions.
2. See spec sheet or contact manufacturer for detailed material, finishes, and configuration options.
3. Contact manufacturer for detailed layout.
4. Do not scale drawings.
5. Subject to change without notice.
6. For patent information, visit our Patent Page.

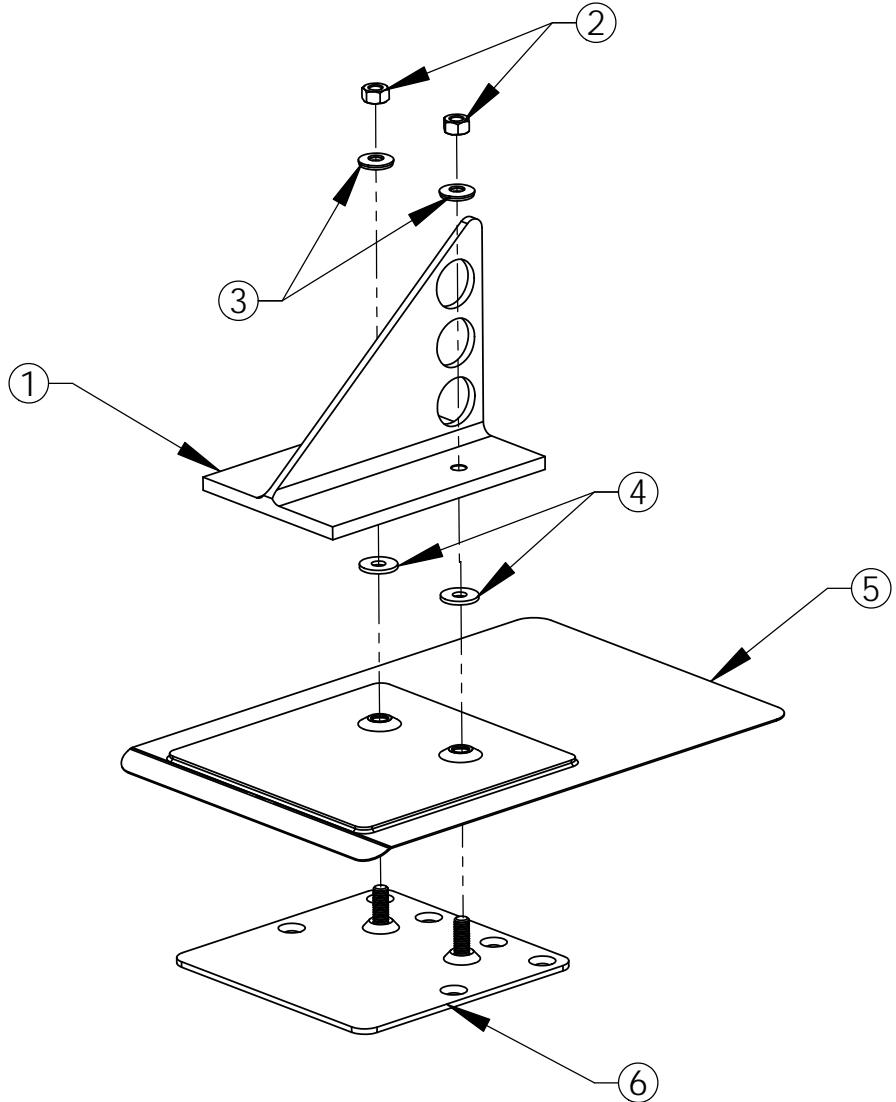

ITEM NO.	PART CODE	DESCRIPTION	QTY
1	KIT-145 BRACKET (3-PIPE SHOWN)	KIT-145 BRACKET (2-PIPE, 3-PIPE, OR HI HOLE OPTIONS)	1
2	N-HX SS-.3125-18	NUT SS HEX FINISHED .3125-18 (INCLUDED IN POLY KIT 145)	2
3	W-NEO SS-.313	SS NEO WASHER .313 ID (INCLUDED IN POLY KIT 145)	2
4	W-EPDM .313 QF	EPDM SEALING WASHER .313 ID (INCLUDED IN POLY KIT QF FLASHING)	2
5	PP99-AL-8X12-100	8X12 METAL FLASHING EMBOSSED FOR 6X6 PLATE	1
6	BASE SS 6X6-100	SS 6X6-100 BASE PLATE	1



289 Harrel Street  
 Morrisville, VT 05661  
 Phone: 1.888.766.4273  
 Fax: 1.888.766.9994  
 Email: [Info@alpinesnowguards.com](mailto:Info@alpinesnowguards.com)