


# Assembly Sheet - PP145 (ALL CONFIGURATIONS)

1. Installation to be completed in accordance with manufacturer's written specifications and installation instructions.
2. See spec sheet or contact manufacturer for detailed material, finishes, and configuration options.
3. Contact manufacturer for detailed layout.
4. Do not scale drawings.
5. Subject to change without notice.
6. For patent information, visit our [Patent Page](#).

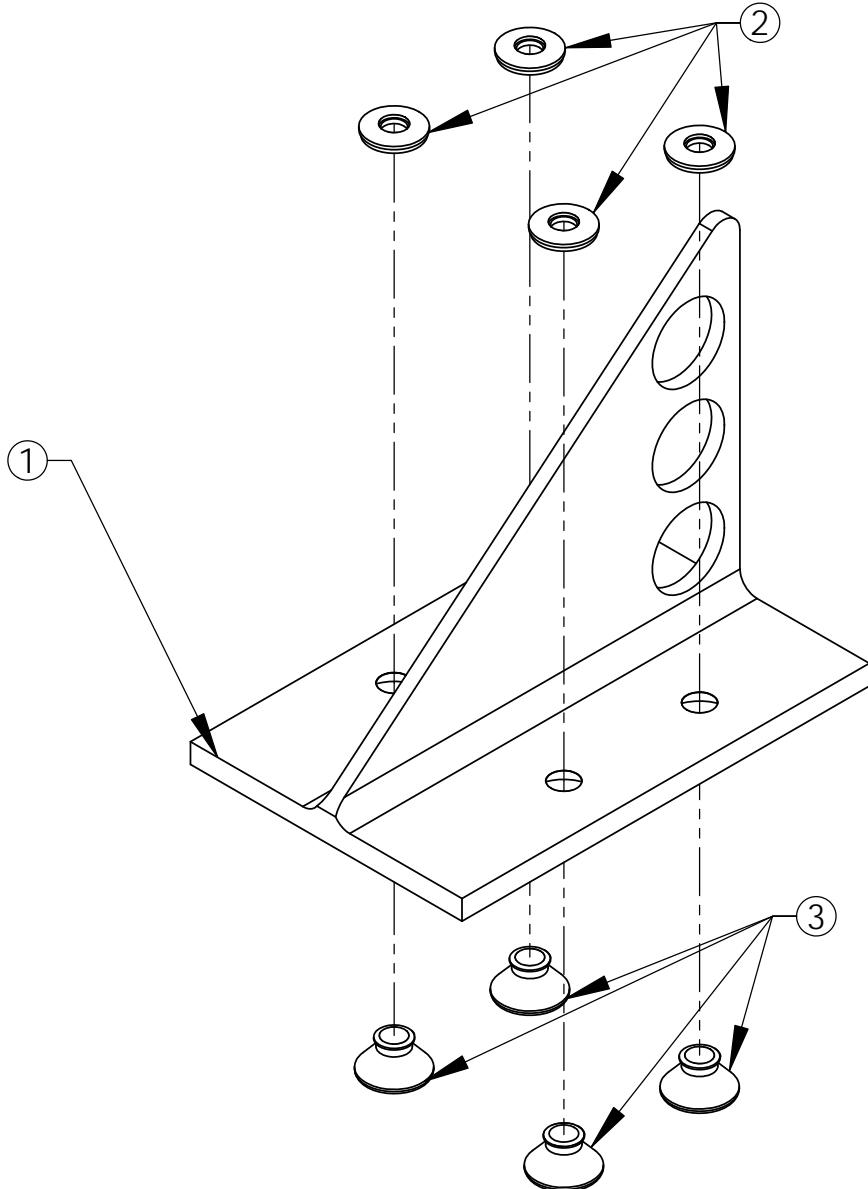

ITEM NO.	PART CODE	DESCRIPTION	QTY
1	PP145 BRACKET (3-PIPE SHOWN)	145 4 FASTEN BRACKET (2-PIPE, 3-PIPE, OR HI HOLE OPTIONS)	1
2	W-NEO SS-.313	SS NEO WASHER .313 ID (INCLUDED IN POLY KIT GF NEO)	4
3	EPDM-BUSHING	EPDM COMPRESSION SEAL BUSHING (INCLUDED IN POLY KIT EPDMBUSHING)	4



289 Harrel Street  
Morrisville, VT 05661  
Phone: 1.888.766.4273  
Fax: 1.888.766.9994  
Email: [Info@alpinesnowguards.com](mailto:Info@alpinesnowguards.com)