


Assembly Sheet - PP225-BR-UPKIT

1. Installation to be completed in accordance with manufacturer's written specifications and installation instructions.
2. See spec sheet or contact manufacturer for detailed material, finishes, and configuration options.
3. Contact manufacturer for detailed layout.
4. Do not scale drawings.
5. Subject to change without notice.
6. For patent information, visit our [Patent Page](#).

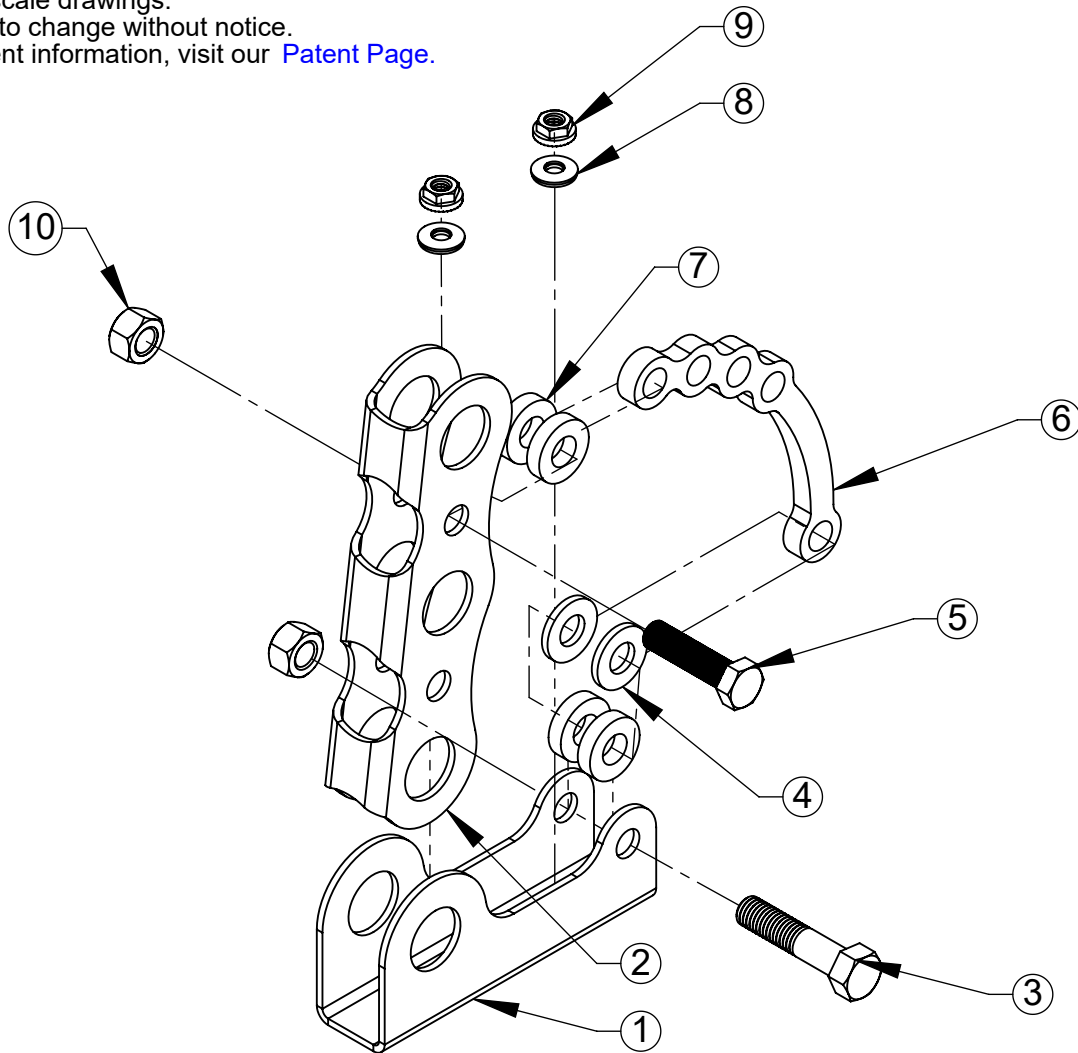

ITEM NO.	PART CODE	DESCRIPTION	QTY
1	BASE-PP225-BR	BASE FOR 225 BR UPKIT	1
2	UPRT-PP225-BR	BR 225 UPRIGHT FOR UPKIT	1
3	B-HX BR-.5-13X2.25	BR HEX BOLT .5-13X2.25	1
4	SPACER BR .125IN	BR 1/8" SPACER	2
5	B-HX BR-.5-13X1.75	BR HEX BOLT .5-13X1.75	1
6	PP225 CONNECT BR	PP225 CONNECTOR CAST BR	1
7	SPACER BR .25IN	BR 1/4" SPACER	4
8	W-NEO SS-.313	SS NEO WASHER .313 ID (INCLUDED IN POLY KIT GF NEO)	2
9	N-FL SS-.313-18	SS FLANGE NUT .313-18	2
10	N-HX BR-.5-13	BR HEX NUT .5-13	2



289 Harrel Street
Morrisville, VT 05661
Phone: 1.888.766.4273
Fax: 1.888.766.9994
Email: Info@alpinesnowguards.com

Scale: 1:3

12/27/2022