


Assembly Sheet - PP315 6X8 (ALL CONFIGURATIONS) (ALL MATERIALS)

1. Installation to be completed in accordance with manufacturer's written specifications and installation instructions.
2. See spec sheet or contact manufacturer for detailed material, finishes, and configuration options.
3. Contact manufacturer for detailed layout.
4. Do not scale drawings.
5. Subject to change without notice.
6. For patent information, visit our [Patent Page](#).

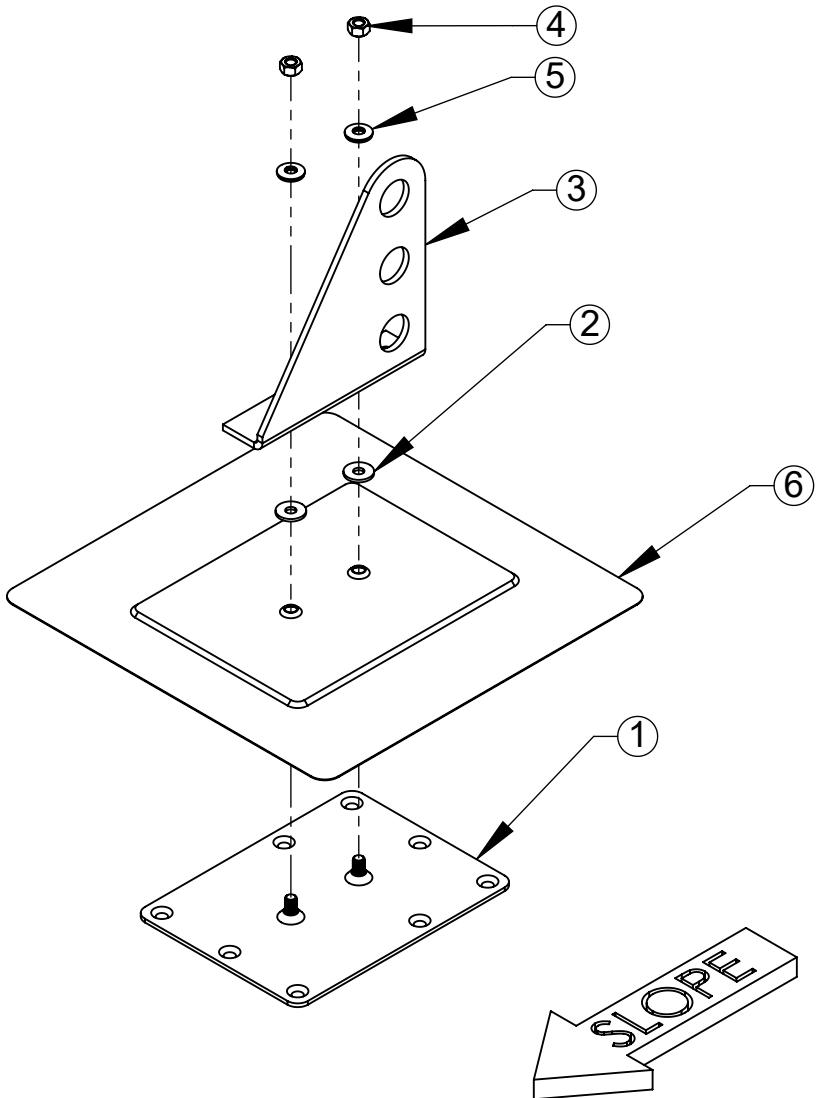

ITEM NO.	PART CODE	DESCRIPTION	QTY
1	BASE SS 6X8-200	SS 6X8-200 BASE PLATE	1
2	W-EPDM .313 QF	EPDM SEALING WASHER .313ID (INCLUDED IN POLY KIT QF FLASHING)	2
3	PP314 BRACKET (3-PIPE SHOWN)	314 BRACKET (2-PIPE, 3-PIPE, OR HI HOLE OPTIONS)	1
4	N-HX SS-.3125-18	SS FINISHED HEX NUT .3125-18 (INCLUDED IN POLY KIT 145)	2
5	W-NEO SS-.313	SS NEO WASHER .313ID (INCLUDED IN POLY KIT 145)	2
6	PP99-CU	12X12 COPPER FLASHING EMBOSSED 6X8 (OPTIONAL)	1



289 Harrel Street
 Morrisville, VT 05661
 Phone: 1.888.766.4273
 Fax: 1.888.766.9994
 Email: Info@alpinesnowguards.com