


Assembly Sheet - PP86 INTERNAL COUPLING

1. Installation to be completed in accordance with manufacturer's written specifications and installation instructions.
2. See spec sheet or contact manufacturer for detailed material, finishes, and configuration options.
3. Contact manufacturer for detailed layout.
4. Do not scale drawings.
5. Subject to change without notice.

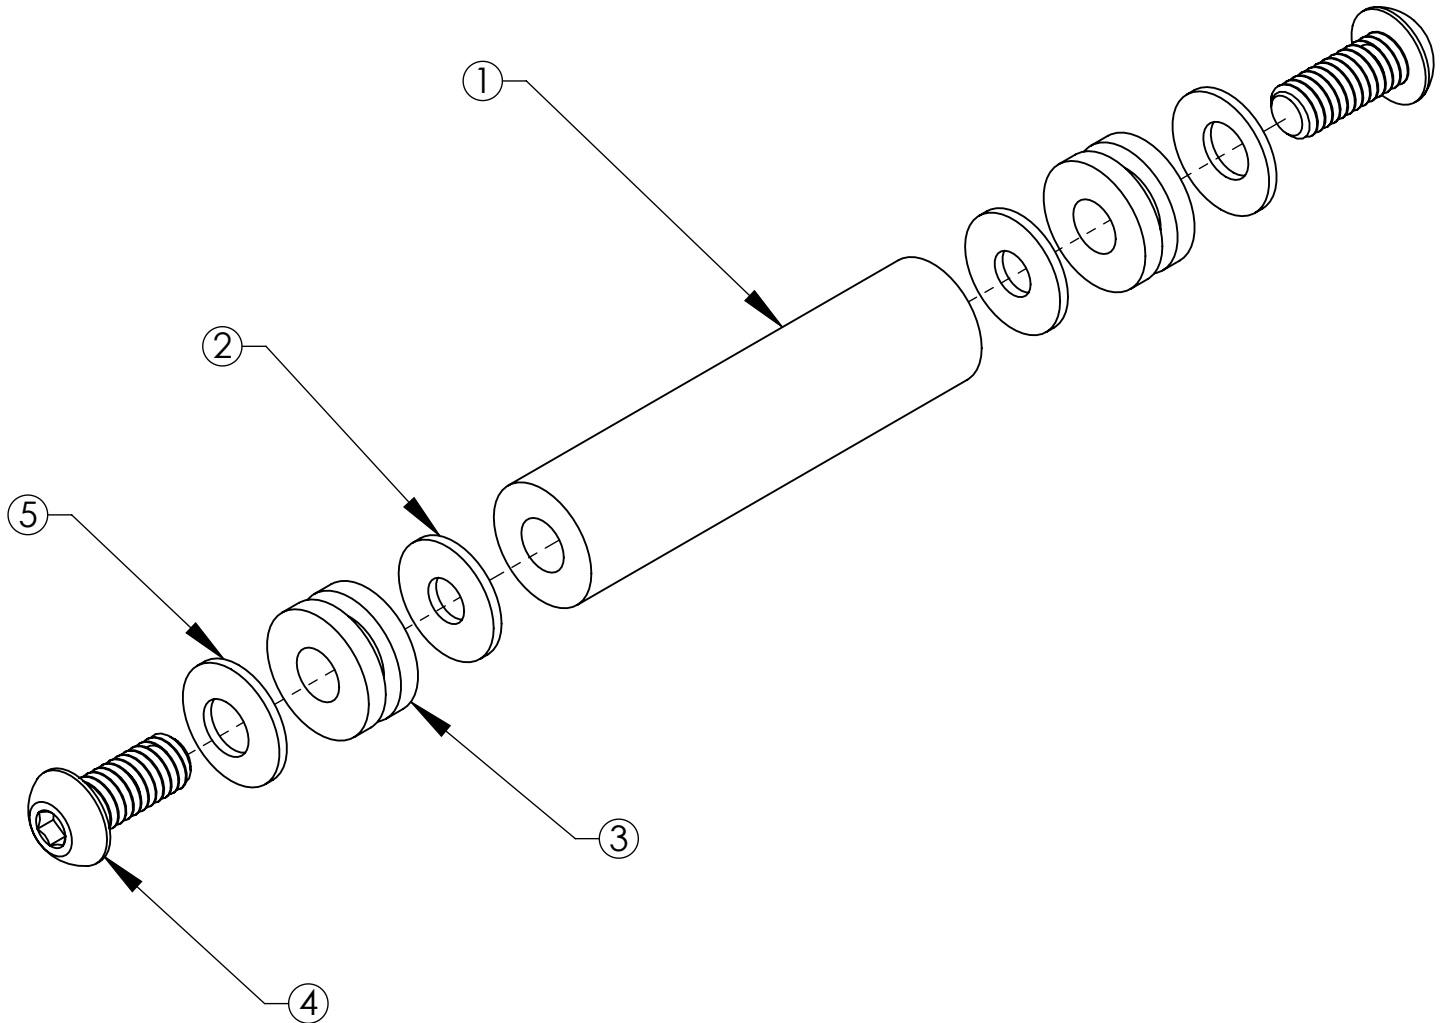

ITEM NO.	PART CODE	DESCRIPTION	QTY
1	PP86 BLANK	PP86 MILLED BLANK COUPL (AL, BR OR SS)	1
2	W-FLT .3125-NYLON	WASHER FLAT .3125 NYLON CPLG	2
3	GROMMET 86 INT CPLG	86 INTERNAL CPLG GROMMET .3125	2
4	B-BTN SS-.313-18X.75	SS BTN HEAD BOLT .313-18X.75	2
5	W-FLT SS-.313 PP86	SS FLAT WASHER .313 ID PP86	2



289 Harrel Street
Morrisville, VT 05661
Phone: 1.888.766.4273
Fax: 1.888.766.9994
Email: Info@alpinesnowguards.com

Scale: 1:1

7/17/2018