


Snow Dog-BLK Installation Instructions Solar Snow Management System

TYPICAL APPLICATION

- Solar Panels (upslope panels only)

Portrait Layout: Alpine suggests using a minimum of two SNOW DOG-BLK per panel.

Landscape Layout: Alpine suggests using a minimum of three SNOW DOG-BLK per panel.

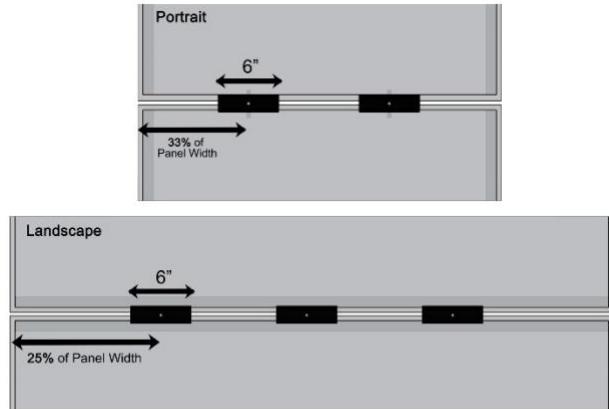

INSTALLATION

1. Ensure that SNOW DOG-BLK rounded edge is facing downslope (Figure A).
2. Align T-Nut parallel with SNOW DOG-BLK to fit between horizontal joints of array (Figure A).
Note: Will fit between joints 3/8"-7/8" wide.
3. Engage top edge of downslope panel with Alignment Ridge so SNOW DOG-BLK rests on both the top of downslope panel and bottom edge of upslope panel (Figure B).
4. Turn T-Nut perpendicular to SNOW DOG-BLK to engage both the top edge of downslope panel and bottom edge of the upslope panel.
5. Tighten hex bolt on top of SNOW DOG-BLK. Fasten to 120-inch pounds.

Fig. A


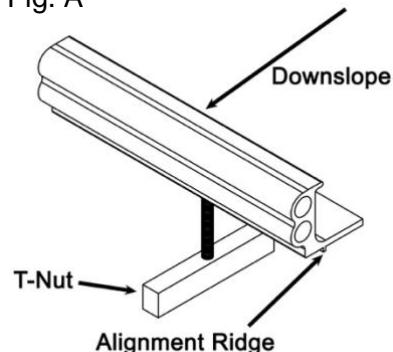


Fig. B

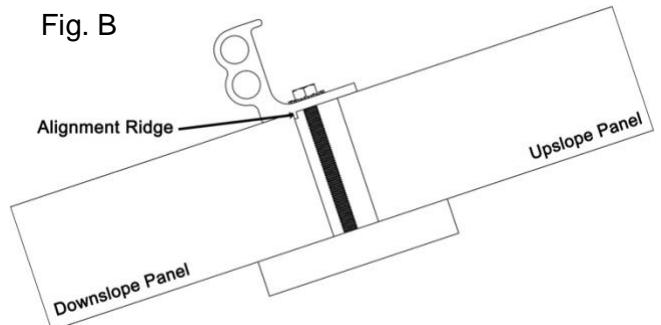

Document Version 1.24.2024
07 72 53 Snow Guards